
Steps for installing Mantra MIS100V2 IRIS scanner



- 1. First of all, when you are installing these software, you will deactivate/stop antivirus in your computer and also attached cable of the device in the USB of the computer.
- 2. Download and install both software (MIS100V2 driver and MIS100V2 RD services) from website https://download.mantratecapp.com/forms/downloadfiles one by one.

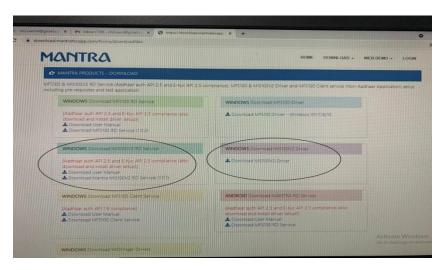


- 3. Install software "attendance_client8102 or BAS" from Google drive link in the attachment of same email, if this software is already install on your computer system then no need to install it again.
- 4. Open the BAS software from desktop.
- 5. Select Chandigarh
- 6. Fill Activation Code (For Activation code please contact on 0172-5086040 From Monday to Friday between 10:30 AM to 5:00PM on working day)

Steps for installing Mantra MFS100V54 Finger Printer Device



- 1. First of all, when you are installing these software, you will deactivate/stop antivirus in your computer also attached cable of the device in the USB of the computer.
- 2. Download and install both software (MFS100 driver and MFS100 RD services) from website https://download.mantratecapp.com/forms/downloadfiles one by one.

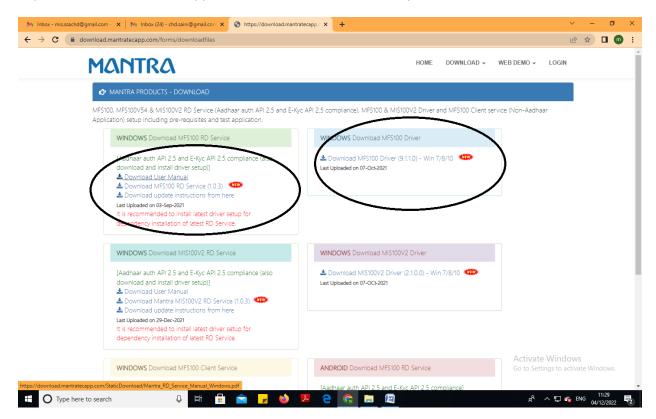

- 3. Install software "attendance_client8102 or BAS" from Google drive link in the attachment of same email, if this software is already install on your computer system then no need to install it again.
- 4. Open the BAS software from desktop .
- 5. Select Chandigarh
- 6. Fill Activation Code(For Activation code please contact on 0172-5086040 From Monday to Friday between 10:30 AM to 5:00PM on working day).

Precision TAB



These machines are out of warranty, for AMC and any issue in the Precision TAB, school may contact directly with Precision company Executive (Mr. Sanjeev, Mob No 7015740466).

Mantra MFSTAB



These machines are out of warranty, for AMC and any issue in the Mantra MFSTAB, school may go to company website https://servico.mantratecapp.com/ for repair and support or dial company customer care number 07949068000 Ext 1 for hardware and software support.